
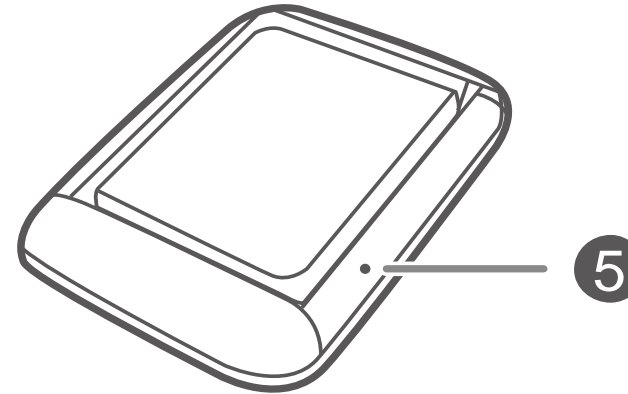


# Product Description

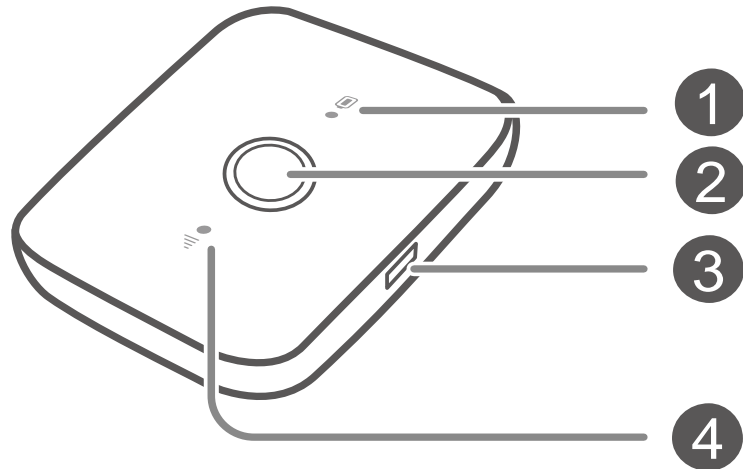

## 1. Battery indicator

- Green: Sufficient battery.
- Blinking green: Charging the battery.
- Red: Low battery.

## 2. Power button

- Press and hold to turn your Mobile WiFi on or off.

## 3. Micro USB port

## 4. Signal indicator


- Green: Strong signal.
- Yellow: Weak signal.
- Red: No signal.

## 5. RESET button

# First Steps

## Connecting a device

- The default SSID (WiFi Name) and password are printed in a label in the back cover of the Mobile WiFi
- Keep pressing the power on button until the LED indicators lights up, which will indicate the Mobile WiFi is ON.

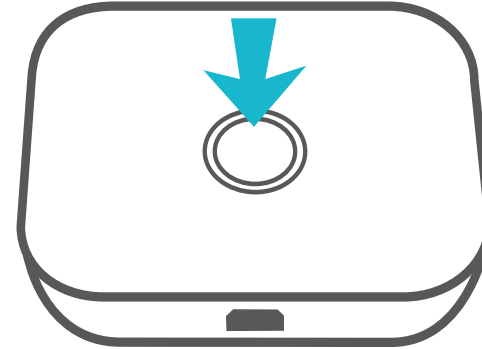

# Restore Factory Settings

## To Reset your device

- Turn on your Mobile Wi-Fi.
- Remove your Mobile Wi-Fi's battery cover. You'll find the **Reset button** (see pic)
- Using a pin, press and hold the **Reset button** for five to ten seconds.
- The Mobile Wi-Fi will automatically **restart**. Your default settings will now be restored.

